

LINDY®

CONNECTION PERFECTION

Product Name

User Manual

English

 
 


LINDY No. 42770



www.LINDY.com

Important Safety Instructions and Caution

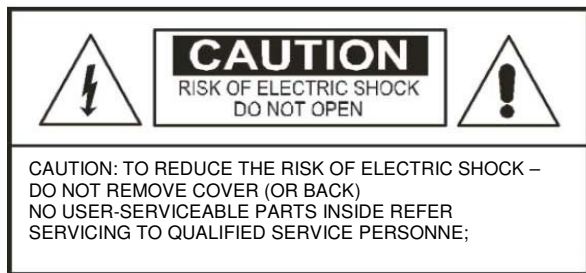

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk at electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance

WARNING : TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF POWER PLUG TO WIDE SLOT OF AC OUTLET AND FULLY INSERT.



PORTABLE CART WARNING DO NOT REMOVE THIS TAG (MARKING)

The words " WARNING, MOVE WITH CARE. THIS CART/APPLIANCE COMBINATION SHOULD NOT BE MOVED BY CHILDREN WITHOUT PROPER GUIDANCE FROM AN ADULT "

OR

An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn

S3125A

Electrical energy can perform many useful functions. This unit has been engineered and manufactured to assure your personal safety. Improper use can result in potential electrical shock or fire hazards. In order not to defeat the safeguards, observe the following basic rules for its installation, use and servicing.

 
1. Read Instructions: All the safety and operating instructions should be read before the product is operated.
2. Retain Instructions: The safety and operating instructions should be retained for future reference.
3. Heed Warnings: All warnings on the product and in the operating instructions should be adhered to.
4. Follow Instructions: All operating and use instructions should be followed.
5. Cleaning: Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. Attachments: Do not use attachments not recommended by the product manufacturer as they may cause hazards.
7. Water and Moisture: Do not use this product near water-for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.
8. Accessories: Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
9. Carts and Stands: The product should be used only with a cart or stand that is recommended by the manufacturer.
9A. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
10. Ventilation: Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
11. Power Sources: This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.

English Manual

12. **Grounding or Polarization:** This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

Alternate Warnings: This product is equipped with a three-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.

13. **Power-Cord Protection:** Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.
14. **Protective Attachment Plug:** The product is equipped with an attachment plug having overload protection. This is a safety feature. See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.
15. **Outdoor Antenna Grounding:** If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure A on page 5.
16. **Lightning:** For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
17. **Power Lines** An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
18. **Overloading:** Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
19. **Object and Liquid Entry:** Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
20. **Servicing:** Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
21. **Damage Requiring Service** Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
- a) When the power-supply cord or plug is damaged,
 - b) If liquid has been spilled, or objects have fallen into the product,
 - c) If the product has been exposed to rain or water,
 - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation,
 - e) If the product has been dropped or damaged in any way, and
 - f) When the product exhibits a distinct change in performance, this indicates a need for service.
22. **Replacement Parts:** When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
23. **Safety Check:** Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
24. **Wall or Ceiling Mounting:** The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
25. **Heat:** The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

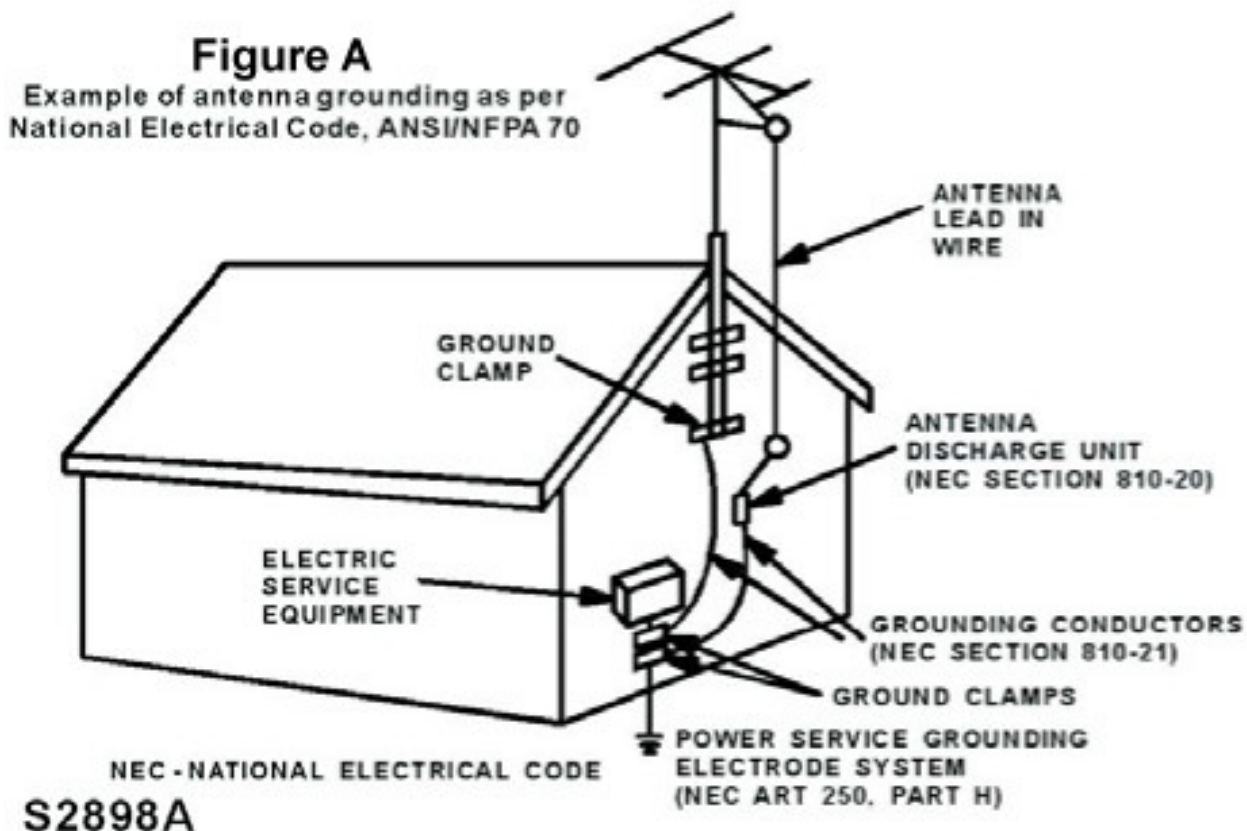

Precaution

On Safety

- Do not use wet hands to pull out the plug. It may cause electrical shock.
- If the player does not work, please pull out the plug for safety. Contact us for further technical support.
- Before moving the player, please make sure the power adapter is disconnected from the wall outlet.
- Do not move the player when playing. It may cause a fire or electrical shock.
- Should any solid object or liquid fall into the cabinet, unplug the player and have it checked by qualified personnel before operating it any further.
- If you are not going to use the player for a long while, be sure to disconnect the player from the wall outlet. To disconnect the power adapter, grasp the plug itself; never pull the cord.

On Placement

- Please keep a sufficient distance between the player and a radio set. A sufficient distance is also needed between the player and any other devices with electromagnetic field.
- Please place the player in a location with adequate ventilation to prevent heat build-up in the player.
- Do not place the player on a soft surface such as a rug that might block the ventilation holes on the bottom.
- Do not place the player in a location near heat sources, or in places subject to direct sunlight, excessive dust, or mechanical shock.
- Do not place the player in a location exposed to cool air. Condensation may occur and cause the player work incorrectly.

On Operation

- The player may not work because of improper operation. The limited warranty does not cover consequent losses that rise from improper usage.
- Turn off the player when you are watching regular TV program. It may cause a picture distortion.
- The player will not work correctly when affected by exterior elements such as static electricity. In such cases, pull out the power adapter and plug it back to the outlet again.

Table of Contents

Preface	5
I. Get Started	6
I.1. Accessories	6
I.2. System Configuration	6
I.3. Use of Operation Panel	7
II. Using the Menu	9
II.1. Home Menu	9
III. Quick Guide for First-time User	10
III.1. DVB-T TV Watching	10
III.2. DVB-T Radio Listening	11
III.3. Record Function	12
III.4. Movie Watching	13
III.5. Music Listening	13
III.6. Photo Viewing	15
IV. Technical Settings	16
IV.1. System Settings	16
IV.2. DVB-T TV/Radio Menu	17
V. Trouble Shooting Q&A	21
VI. Specification	22

Preface

Warning

Unauthorized duplication of copyrighted material may infringe upon the right of third parties and may be contrary to copyright laws.

Safety Notes

- Do not bend, drop, crush, puncture, incinerate, or open this device.
- Keep this device within acceptable temperatures. Do not submit it to extreme temperatures.
- Do not use this device in rain, or near washbasins or other wet locations. Take care not to spill any food or liquid into it. In case this device gets wet, unplug all cables, turn it off and allow it to dry thoroughly before turning it on again.
- Never attempt to repair this device by yourself. It does not contain any user serviceable parts. The battery should be replaced only by authorized service providers.
- Do use headphones safely. Use of headphones while operating a vehicle is not recommended and is illegal in some areas. Be careful and attentive while driving. Stop using this device if you find it disruptive or distracting while driving or performing any other activity that requires your full attention.

I. Get Started

I.1. Accessories

Basic

- ☐ Power Adaptor
- ☐ AV Cord

 
- ☐ Portable Antenna

Optional


- ☐ Cigarette Lighter Adaptor
- ☐ Earphone

- ☐ MCX-to-IEC connector
- ☐ Car Holder Kit

I.2. System Configuration

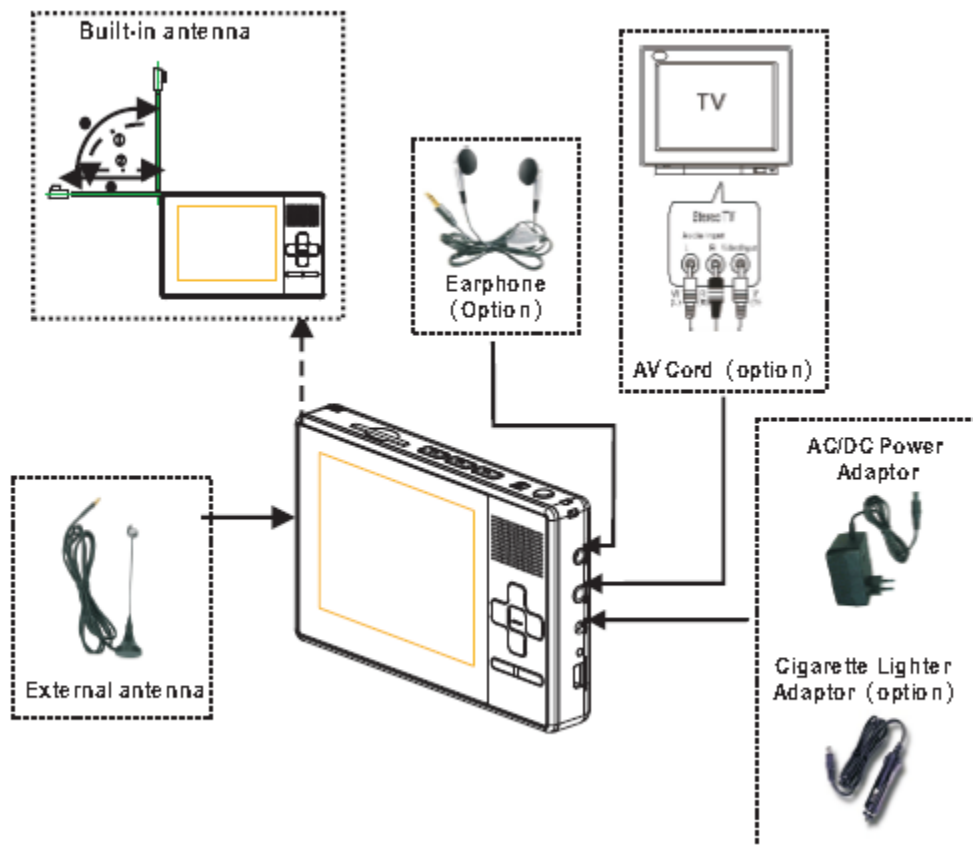


I.3. Use of Operation Panel

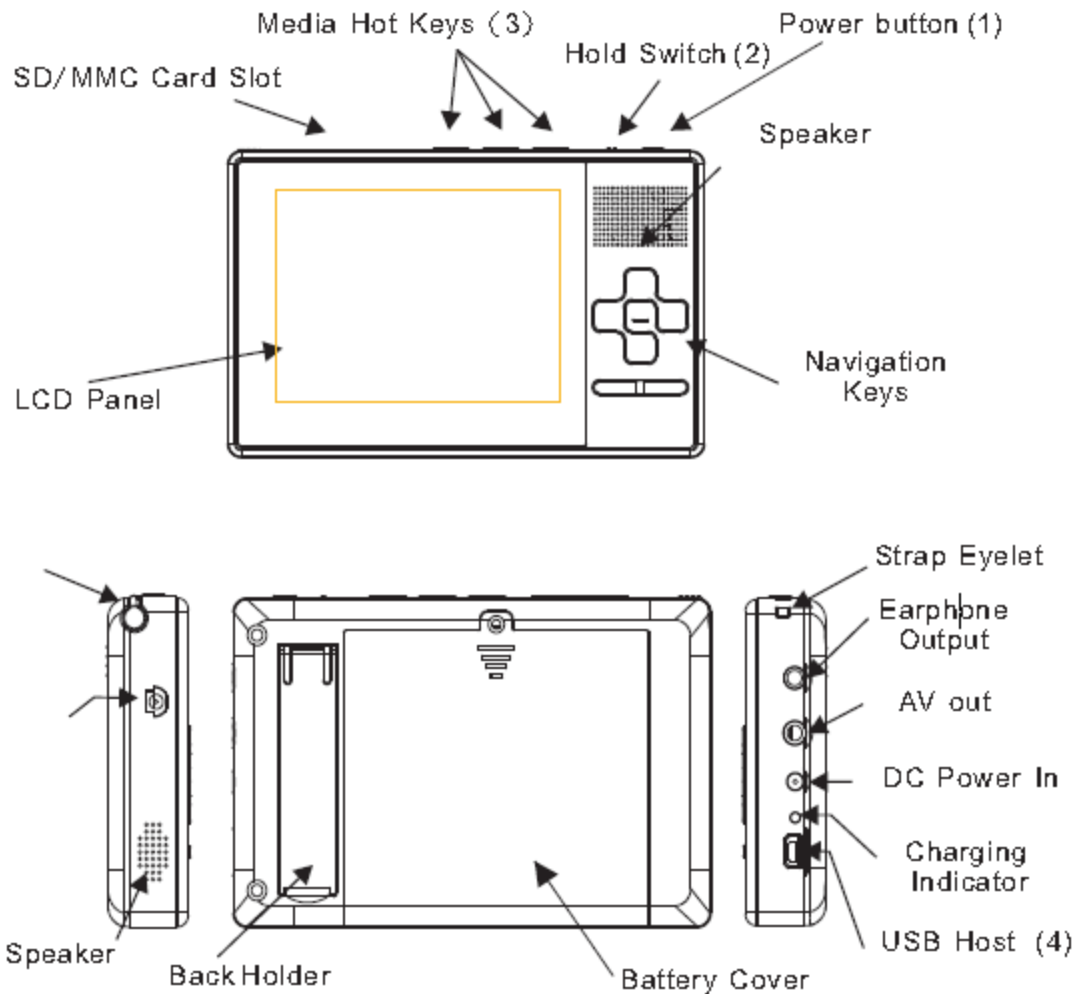 

- (1) Power button: Power on/off.
- (2) Hold Switch: Enable/Disable the keypad and the hot-keys.
- (3) Hot-Keys: allow to fast rewind, fast forward and play/pause/record media files.
- (4) USB Host Port: only for reading USB memory stick.

 Key Functions

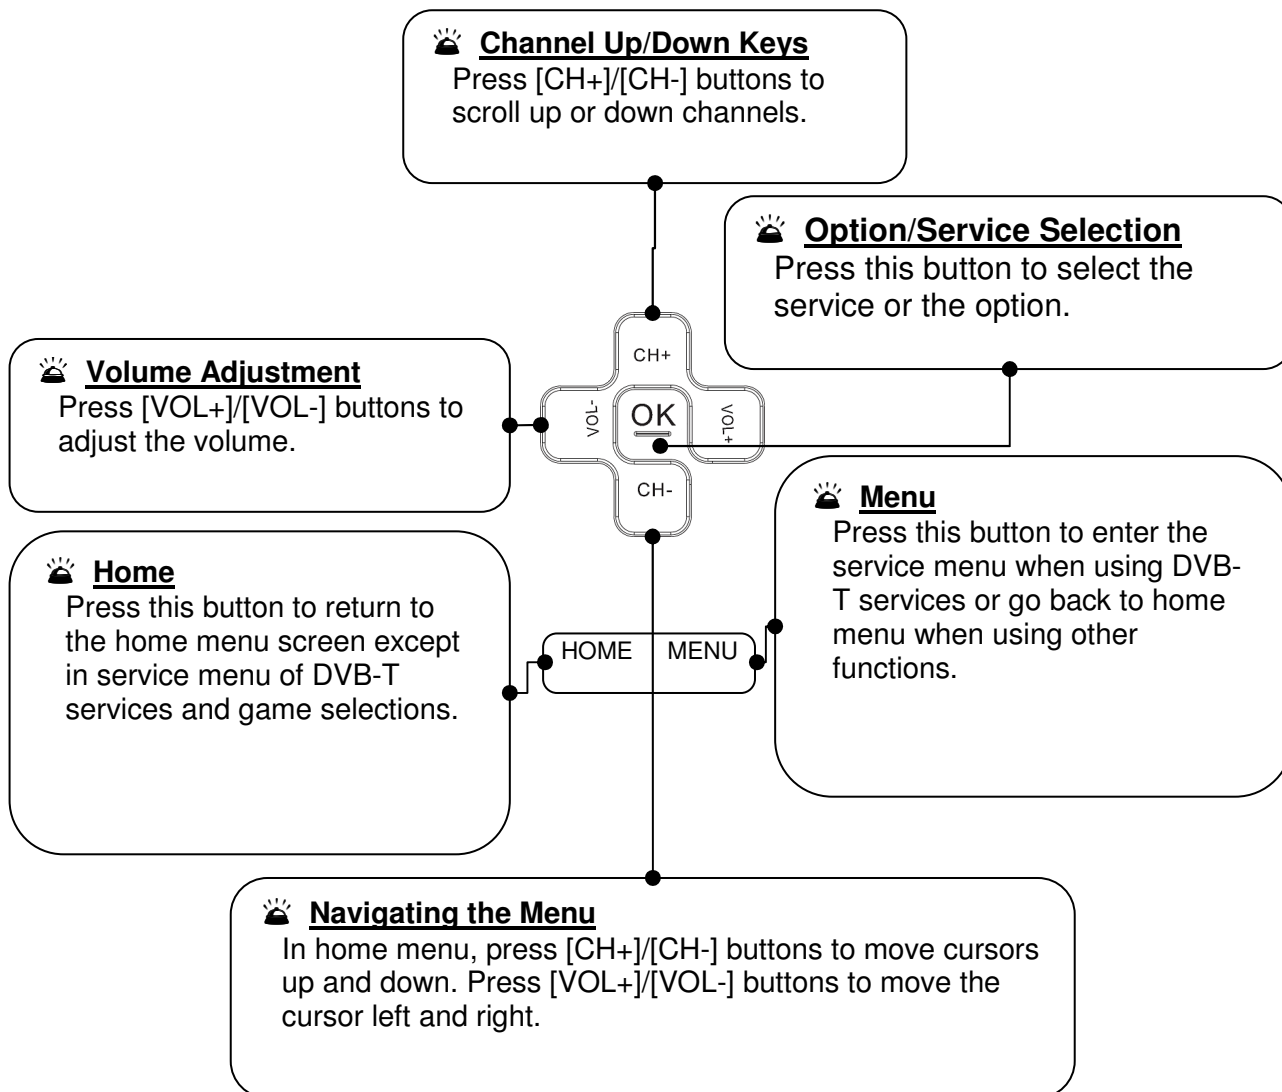

Media HOT KEYS

Hot keys are located on the top of the device. They allow you to rewind/fast forward, play/pause and go previous/next file when playing video or music files.



Previous/ Fast rewinding function.

- Press the key to play the previous video/audio file.
- Keep the key pressed to perform the fast rewinding.



Play/Pause function.



Next/Fast Forwarding function.

- Press the key to play the next video/audio file.
- Keep the key pressed to perform the fast forwarding.

II. Using the Menu

II.1. Home Menu

This is the home menu screen. You can highlight the video playback mode, the music playback mode, the picture viewing mode, the DVB-T TV mode, the DVB-T Radio mode, the display settings and Game. Use [VOL+] and [VOL-] buttons to highlight the desired item and press [OK] button to select it.



Movie Playback Mode

To enter playback mode and watch movie files.



Music Playback Mode

To enter audio playback mode and listen to music.



Photo Viewing Mode

To enter photo viewing mode and watch pictures.



DVB-T TV Mode

To enter DVB-T TV mode.



DVB-T Radio Mode

To listen to DVB-T radio broadcasting.



System Settings

To configure the device settings.



Game


To enter the game mode.

III. Quick Guide for First-time User

III.1. DVB-T TV Watching

Step 1: Charging the device

 
1. Connect power adaptor to the main unit.
2. When battery charge starts, the charging LED indicator will be turned on as RED.
3. After battery charge is completed and if the unit is still connected to the power adaptor, this indicator LED will be turned to GREEN instead.

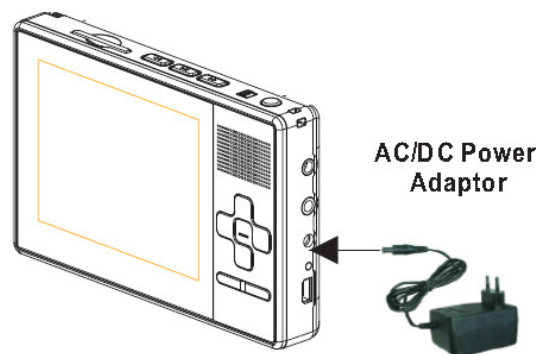


NOTE: you can enjoy mobile TV while battery is charging.

Step 2: Turn on the unit

 (Power button is on top side of the unit)

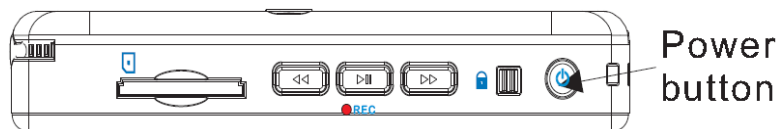

 Step 3: Press [VOL+]/[VOL-] buttons to select “TV” option and press [OK]” button to enter the TV mode.



English Manual

Step 4: Press [OK] button to enter the scan setup.

Step 5: Select your own OSD Language, your located region, whether it's summer time at present.

1. Use [CH+]/[CH-] buttons to highlight the item.
2. Use [VOL+] button to set the highlight item.
3. Press [CH+]/[CH-] buttons to scroll up and down the options.
4. Select one by pressing the [OK] button or exit the setting by pressing the [MENU] button.



NOTE: Time zone setting will be automatically updated once the Region setting is changed.

Step 6: Perform auto search to find available TV DVB-T channels.



1. Use [CH+]/[CH-] buttons to highlight the Auto Search item.
2. Press [OK] button to start.

Step 7: Job well-done! You may now sit back and enjoy your mobile TV.

NOTE: Keep [OK] button pressed to change the aspect ratio of current TV program.

III.2. DVB-T Radio Listening

  1. Press [VOL+]/[VOL-] buttons to select the Radio item and then press [OK] button to enter the radio mode.
2. Press [CH+]/[CH-] to select your preferred radio channel.

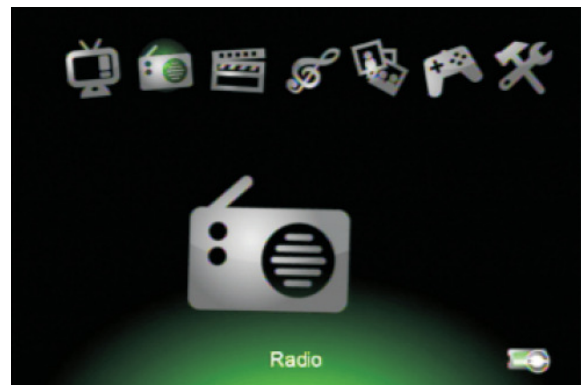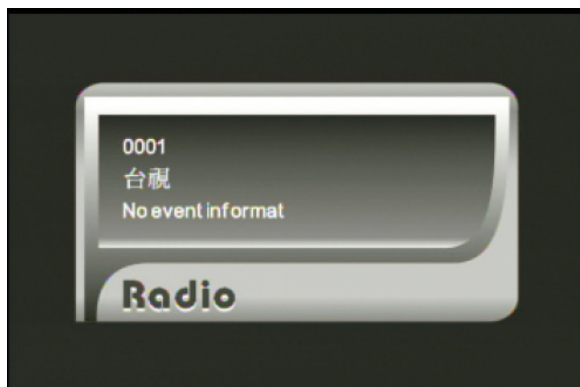


3. The radio service will instantly start.

NOTE: Keep [OK] button pressed to change the aspect ratio of current TV program.


III.3. Record Function

NOTE: The Mobile Media Player supports DVB-T TV and DVB-T Radio recording.

1. During TV/Radio mode press  to start recording TV/Radio programs.

When unit is recording,  **REC** icon will appear on the upper left screen.

NOTE: please ensure that you connect unit to USB device/ SD Card.

2. Press  again or [HOME] to stop recording.

NOTE:

- a. Recorded program will be stored in default folder named as "PVR", as ".mpg" file for TV program and ".mp3" file for Radio program.
- b. Recorded file is named as (Channel Name) + (RecordedDate_RecordedTime), for example BBC ONE (090131_101336).mpeg.
- c. Maximum file size of FAT/FAT32 is 4 GB, so unit will cut the recorded file into 2 parts if the recorded file size is larger than 3.9 GB.

3. Recorded TV program can be played back in Movie mode.
4. Recorded Radio program can be played back in Music mode.



Important notes:

- i. 1 GB storage device can record approximately 45 minutes programs.
- ii. Storage files system support **only** FAT/FAT32 format.
- iii. Generally all SD Card and USB 2.0 can be used as recorded file storage. However, there are cases when the USB device/ SD Card can't store recorded programs. It's strongly suggested to format USB device/ SD Card before use it as recorded file storage.
- iv. **WARNING!** Please do not edit the "*.PLT" & "RECORD.TMP" files. Modifying/deleting this file will cause error on recorded file.

III.4. Watching Movies

The Mobile Media Player supports mpg, dat, vob, and avi (MPEG4ASP, XVID, Div 4.0/5.0) format video files. The section below will explain you how to quickly play a video file stored on SD/MMC Card or USB device.

 
1. After selecting movie playback mode on the home screen, file browser screen will appear. Press [OK] button to select the root folder.


 





2. The available video files will appear on screen. Use [CH+] and [CH-] buttons to scroll up and down the files, then select the desired file by pressing [OK] button.

NOTE: Users can only choose video files under this mode. If users choose music or photo files, the system will not support.

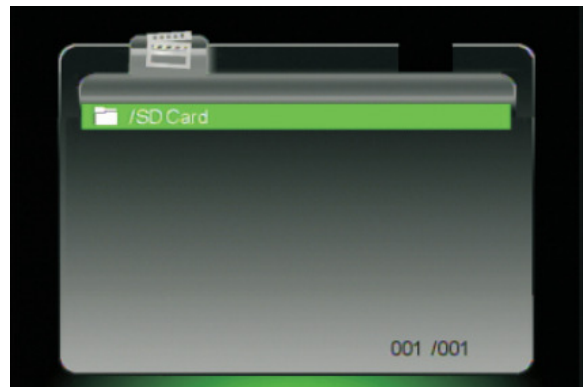3. The video file will instantly start playing.




NOTE: Press the  (FR)/  (FF) button to select next/previous movie. Long press  /  button to increase or decrease the speed of track. Press the  (Play/Pause) button to pause or resume movie playing.



III.5. Listening to Music


The Mobile Media Player supports mp3 and wav format audio files. The section below will explain you how to quickly play a music file stored on SD/MMC Card or USB device.

  1. After selecting music playback mode on the home screen, file browser screen will appear. Press [OK] button to select the root folder.

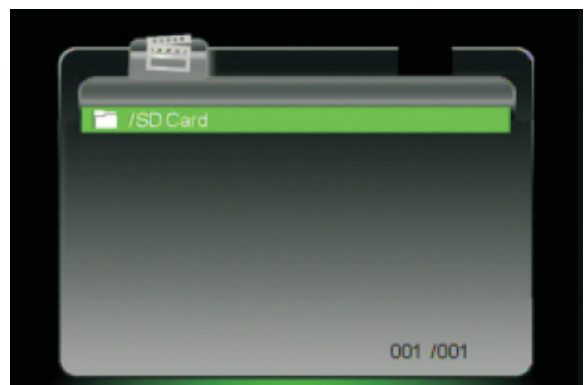




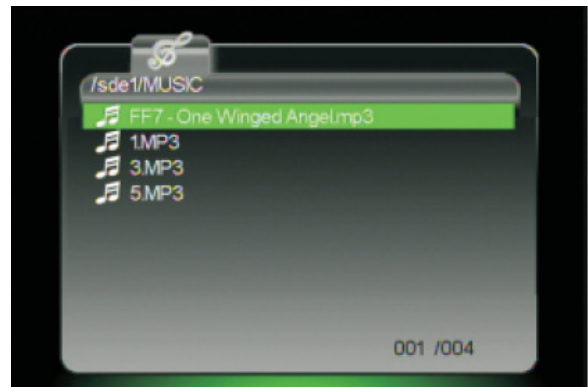


- The available audio files will appear on screen. Use [CH+] and [CH-] buttons to scroll up and down the files, then select the desired file by pressing the [OK] button.

 NOTE: users can only choose music files under this mode. If users choose video or photo file, the system will not support.

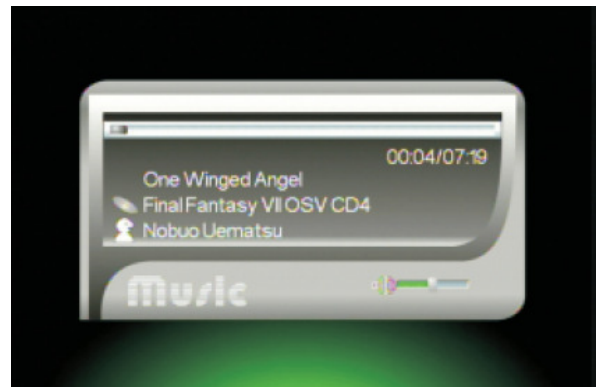

- The audio file will instantly start playing.









NOTE: Press the  (FR)/  (FF) button to select next/previous music. Long press /  button to increase or decrease the speed of track. Press the  (Play/Pause) button to pause or resume music playing.

III.6. Photo Viewing

   The Mobile Media Player supports jpeg, bmp, and gif picture files. The section below will explain you how to view a picture file stored on the SD/MMC Card or USB device.

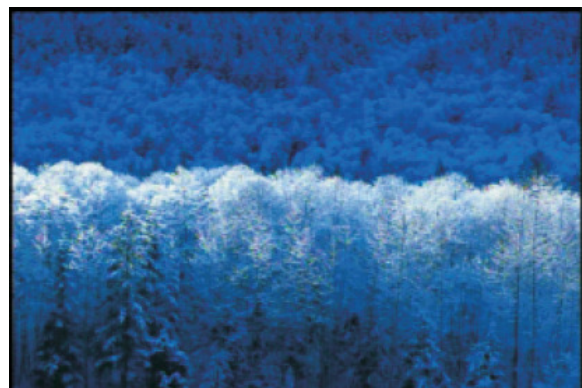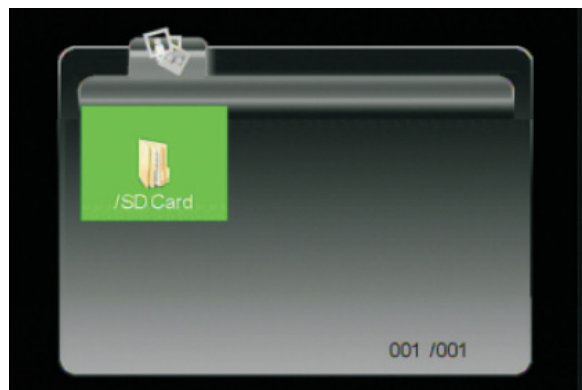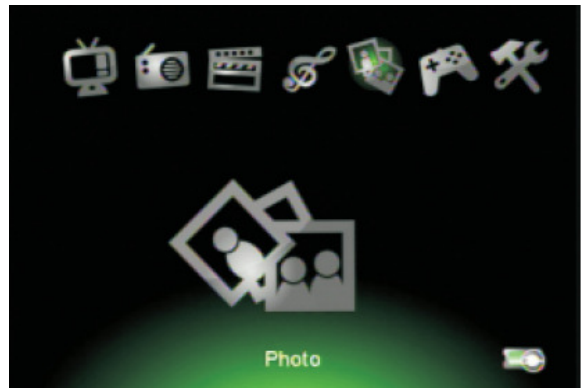1. After selecting photo viewing mode on the home screen, file browser screen will appear. Press [OK] button to select the root folder.
2. Available picture and folders will appear on screen. Use [CH+]/[CH-]/[VOL+]/[VOL-] buttons to browse the folder, then select the desired one by pressing [OK] button.
Note: users can only choose photo files under this mode. If users choose music or video files, the system will not support.
3. A picture preview will appear. Press [CH+]/[CH-]/[VOL+]/[VOL-] to select a picture, and press [OK] button to display the picture in full screen mode.




NOTE: Press the  (FR)/  (FF) button to select next/previous photo. Press the  (Play/Pause) button to pause or resume the slideshow.

Advanced Functions


 
Rotating picture

Press [VOL+] button to rotate the picture clockwise, press [VOL-] button to rotate it counterclockwise.

Slideshow

Press  (Play/Pause) to start/stop the photo slideshow.

Zoom

1. When viewing a picture, presses [OK] button to active the zoom function.
2. Press [OK] or  to zoom in.
3. Press  to zoom out.
4. Use [CH+]/[CH-]/[VOL+]/[VOL-] to navigate the picture.
5. Press [MENU] button to exit the zoom function.


Technical Settings

III.7. System Settings

This is the system settings menu screen. Users can adjust the country/language setting, the sound setup, display, time, and proceed to a software upgrade. Use [VOL+] and [VOL-] buttons to highlight the desired item and press [OK] button to select one.




 IV.1.1. Display Settings




To set up the TV system (PAL, NTSC, AUTO), the aspect ratio, adjust brightness and to switch on/off the auto backlight.

 1. Press [CH+]/[CH-] buttons to highlight the item you want to adjust.
2. Press [VOL+] button and use [CH+]/[CH-] to scroll up and down the options.
3. Select one by pressing the [OK] button or exit the setting by pressing the [MENU] button.
4. After adjusting, press [MENU] button to exit the "Display Settings".

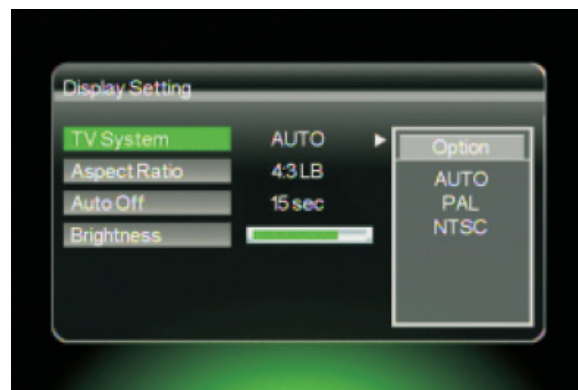


IV.1.3. Region & Language Settings

 

To set up the OSD language and DVB-T regional settings.

 1. Press [CH+]/[CH-] buttons to highlight the item you want to adjust.
2. Press [VOL+] button and use [CH+]/[CH-] to scroll up and down the options.
3. Select one by pressing the [OK] button or exit the setting by pressing the [MENU] button.
4. After adjusting, press [MENU] button to exit the "Region & Language Settings".

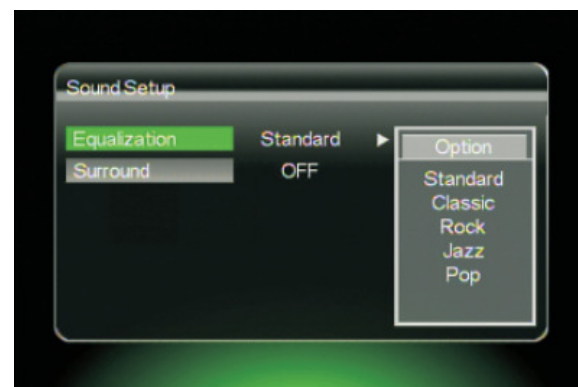

IV.1.3. Sound Setup

To select a sound effect and set up the equalizer.




1. Press [CH+]/[CH-] buttons to highlight the item you want to adjust.
2. Press [VOL+] button and use [CH+]/[CH-] to scroll up and down the options.
3. Select one by pressing the [OK] button or exit the setting by pressing the [MENU] button.
4. After adjusting, press [MENU] button to exit the “Sound Setup”.

IV.1.4. Software Version and Upgrade

To upgrade the user interface software version.




 1. Insert the SD/MMC card containing the software upgrade file into the card slot.
2. After entering the Version/Upgrade menu, press [CH-] button until highlighting the software upgrade function.
3. Press [OK] button to start the upgrade.

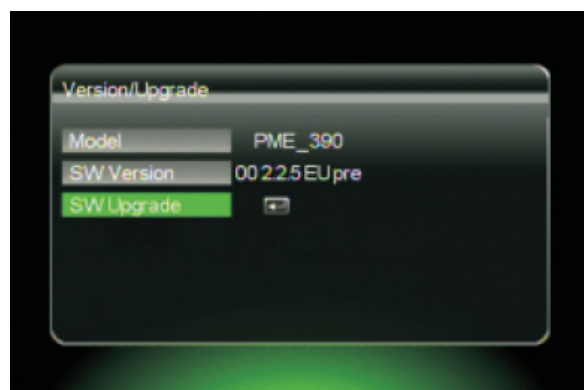


III.8. DVB-T TV/Radio Menu

 After entering the DVB-T TV or Radio service, press [MENU] button to make the menu appear. By navigating the different options, you can have access to the program list, the channel management, the automatic channel search function, the DVB-T audio settings, the channel info, the subtitle function, the teletext, the antenna selection, and the parental lock.

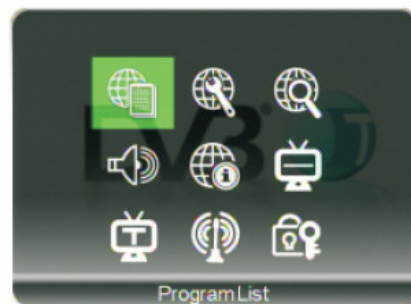


IV.2.1. Program List

 The display channel information, preview the program, and to access the Electronic Program Guide (EPG)



 1. Select “Program List” in the TV menu and press [OK] button. The “Program List” will appear on screen.
2. Press [CH+]/[CH-] buttons to scroll up/down the channel list to preview the program.
3. Press [VOL+] button to show the details of the channel.
4. Press [MENU] button to exit.

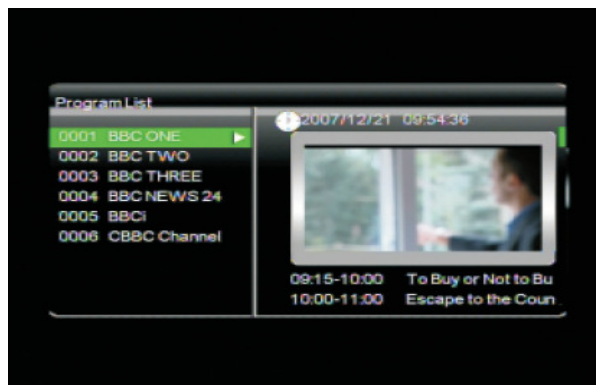

IV.2.2. Channel Management

To rearrange and to edit the TV channel listing using skip, move, lock, and delete functions.



1. Select “Channel Management” in the TV Menu and press [OK] button. The management screen will appear as on the picture on the right.
2. Press [CH+]/[CH-] buttons to scroll up/down the channel list. Press [OK] button to enter the editing menu for a chosen channel.
3. Press [MENU] button to exit anytime.



Skip a Channel

1. After entering the channel editing menu, select the “SKIP” visual-button on screen by pressing [VOL+]/[VOL-] buttons.
2. Press [OK] button to activate or deactivate it.

NOTE: this function “temporarily” removes the channel from the program list. Users can restore the channels by deactivating the function.

Lock a Channel Access

1. After entering the channel editing menu, select “LOCK” visual-button on screen by pressing [VOL+]/[VOL-] buttons.
2. Press [OK] button to activate or deactivate it.

NOTE: Users need to key passwords when they watch locked channels. Please refer to IV.2.9. Parental Lock page 20 for further details.

 
Channel Movement

1. After entering the channel editing menu, select the “MOVE” visual-button on screen by pressing [VOL+]/[VOL-] buttons.
2. Use [CH+]/[CH-] buttons to move the channel up or down in the list.
3. Press [OK] button to save the new listing.

Channel Delete


1. After entering the channel editing menu, select the “DELETE” visual-button on screen by using [VOL+]/[VOL-] buttons.
2. Press [OK] button to delete the channel.

NOTE: this function will “permanently” delete the channel from the current program list. Users restore the channels only by performing auto search.

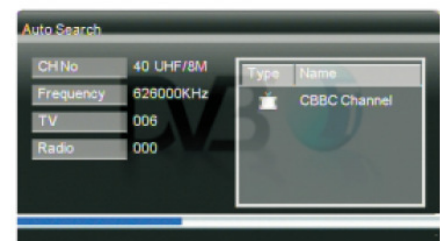


IV.2.3. Automatic Channel Search

 To search the available channels automatically.



 1. Browse the TV menu screen using [CH+]/[CH-]/[VOL+]/[VOL-] buttons to highlight the automatic search option.
2. Press [OK] button to start the channel search.

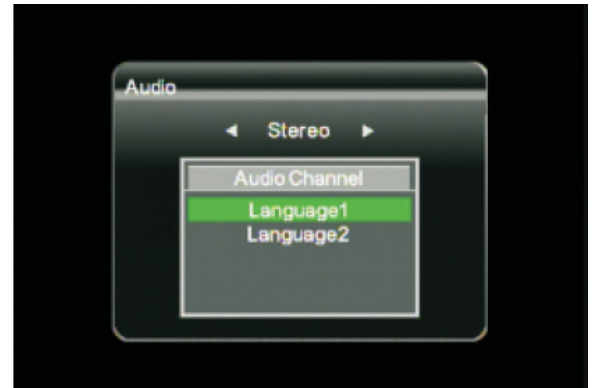

IV.2.4. DVB-T Audio Settings

To select either master or secondary language as well as the audio channel of current service.




1. Browse the TV menu screen using [CH+]/[CH-]/[VOL+]/[VOL-] buttons to highlight the audio option. Press [OK] button to enter the audio menu.
2. Use [VOL+]/[VOL-] buttons to select stereo/left/right audio channel. Scroll the available language using [CH+]/[CH-] buttons. Press [OK] button to select the language.
3. Press [MENU] key to exit.

IV.2.5. Channel Information

Provide the information of current service's system parameters and signal information.



 1. Browse the TV menu screen using [CH+]/[CH-]/[VOL+]/[VOL-] buttons to highlight the channel information option.
2. Press [OK] button to display the channel information.
3. Press [MENU] button to exit

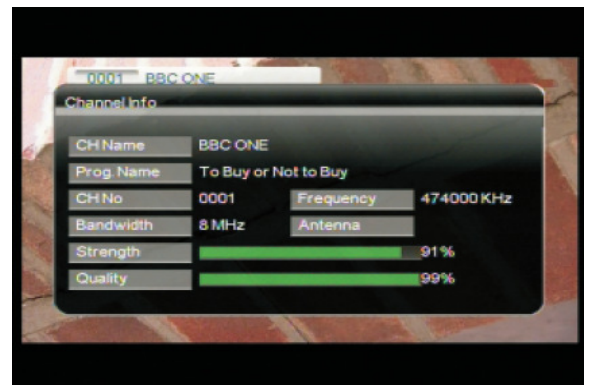


IV.2.6. Antenna Selection

To choose to receive DVB-T broadcasting either via built-in antenna or external antenna.



 1. Browse the TV menu screen using [CH+]/[CH-]/[VOL+]/[VOL-] buttons to highlight the antenna selection option.
2. Press [OK] button to enter.
3. Press [VOL+] key to access the option-list.
4. Use [CH+]/[CH-] to scroll up/down. Press [OK] button to select one option.
5. Press [MENU] key to exit.

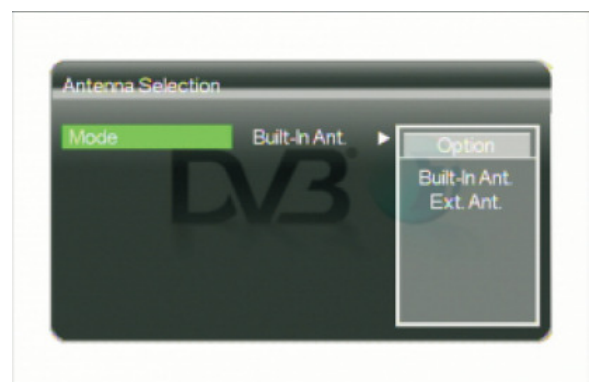

IV.2.7. Subtitle




To activate or deactivate the subtitle function.

IV.2.8. Teletext




To enter the teletext menu.

 IV.2.9. Parental Lock



To set the password of the parental lock.

 1. Browse the TV menu screen use [CH+]/[CH-]/[VOL+]/[VOL-] buttons to highlight the parental lock option.
2. Press [OK] button to enter the parental lock.
3. Press [VOL+] button to access the numerical pad.
4. Use [CH+]/[CH-]/[VOL+]/[VOL-] buttons to browse the on-screen-numerical-pad.
NOTE: the initial password is 0000
5. Select the appropriate password by pressing [OK] button after each number.
6. Press [MENU] key to exit.

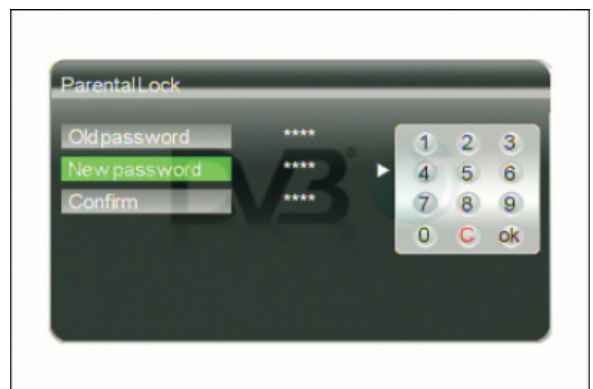

NOTE: parental lock only appears on locked channels. Please see IV.2.2. Channels Management page 18 for further details about locked channels

IV. Trouble Shooting Q&A

Most of the troubleshooting issues can be easily solved. The common cases and their respective solutions are listed in the table below. If the problem persists, please contact the after sales service.

Problem	Possible Reason	Solution
No picture, no audio.	The battery is totally discharged.	Connect the unit to an external power source to charge the battery.
	The power cord is not properly inserted into the unit.	Check the power lead connection. When using the in-car power connector, check if the power is available at the socket.
	The unit is not switched on.	Slide [POWER SWITCH] to "ON" position.
	The SD/MMC Card or USB device is not properly inserted.	Check the SD/MMC Card or USB device to ensure it is properly inserted into unit.
The device does not respond.	The lock function has been switched on.	Check the lock switch position and unlock.
In DVB-T mode, the number of DVB-T channels is not as much as we expected.	The number of available channels is limited due to the local broadcasting system. The available channels can vary depending on the area.	Perform "Auto Search" to rescan all the channels.
	The signal quality of some TV channels is too low.	Use the external antenna to increase the reception sensitivity. For indoor use, place the antenna close to a window and place it on high point.
	Some TV channels are not available.	Only the locally free broadcasted channels can be viewed. They can differ depending on the area.
In DVB-T mode, all of the channels show "no signal or random mosaic tiles appear on the display."	Some TV channels signal quality is too low.	Use the external antenna to increase the reception sensitivity. For indoor use, place the antenna close to a window and place it on high point.
	Wrong antenna is used.	Use only the external antenna provided with this unit.
	No DVB-T service is provided in the area.	Check your country DVB-T coverage map. It is not possible to watch digital TV/listen to digital radio in non-covered areas.
The video is fine but there is no sound.	The audio volume is too low.	Press [VOL+] button to raise the volume.
	The audio is muted.	Press [MUTE] button to disable the mute function.
	The earphones are not connected properly.	Check if the earphone plug is clean and well inserted.
	The device is located close to a strong magnetic field.	Move the device to another location and use it again.

V. Specification

Display	3.5" Colour TFT-LCD
Resolution	320RGB(W)x240(H) pixels
Brightness	250 nits
Contrast Ratio	400:1
View Angle	120° (Horizontal)/105° (Vertical)
Antenna	UHF and VHF band reception Built-in whip antenna Support external antenna input
Speaker	Built-in 0.5 W/8 Ω
Media Support	SD(HC)/MMC Card up to 32GB Mini USB (USB 2.0 supported)
User Interface	7 buttons: [CH+], [CH-], [VOL+], [VOL-], [OK], [MENU], [HOME] Power button and hold switch 3 hot-keys: FF/Next, Play/Pause/REC, FR/Previous A/V output, Earphone
OSD Language	English, German, French, Portuguese, Spanish, Italian, Dutch, Finnish
Features	DVB-T TV/Radio, Auto Channel Search, Multi-Language EPG, Channel Preview, Teletext, Subtitle, TV/Radio Recording
Power Supply	5 V/ 1.4 A DC Built-in rechargeable polymer lithium battery, 3.7 V/ 2000 mA
Operating Time	DVB-T TV/Radio operation: typical 3 hours Video playback: typical 4 hours
Dimension	120 x 78 x 20 (mm)
Weight	200 g (including battery)
Media Format Supported	Audio Format: *.mp3, *.wav Video Format: *.mpg, *.dat, *.vob, *.avi (MPEG4 ASP, XviD, DivX4.0/5.0) Photo Format: *.jpg Audio Recorded Format: *.mp3 Video Recorded Format: *.mpg

Radio Frequency Energy, Certifications

CE Statement, EMC Compatibility

This device complies with EN Standards EN55022 and EN55024 according to the relevant EC EMC Directive. It must be used with shielded cables only to maintain EMC compatibility.

Dieses Produkt entspricht den einschlägigen EMV Richtlinien der EU und darf nur zusammen mit abgeschirmten Kabeln verwendet werden.

LINDY Herstellergarantie

LINDY gewährt für dieses Produkt über die gesetzliche Regelung hinaus eine zweijährige Herstellergarantie ab Kaufdatum. Die detaillierten Bedingungen dieser Garantie finden Sie auf der LINDY Website aufgelistet bei den AGBs.



WEEE (Waste of Electrical and Electronic Equipment), Recycling of Electronic Products

In 2006 the European Union introduced regulations (WEEE) for the collection and recycling of all waste electrical and electronic equipment. The wheeled bin symbol shown indicates that this product must not be disposed of with household waste. Instead the product must be recycled in a manner that is environmentally friendly. For more information on how to dispose of this product, please contact your local recycling centre or your household waste disposal service. Each individual EU member state has implemented the WEEE regulations into national law in slightly different ways. Please follow your national law when you want to dispose of any electrical or electronic products.

More details can be obtained from your national WEEE recycling agency.

Germany / Deutschland

Die Europäische Union hat mit der WEEE Richtlinie umfassende Regelungen für die Verschrottung und das Recycling von Elektro- und Elektronikprodukten geschaffen. Diese wurden von der Bundesregierung im Elektro- und Elektronikgerätegesetz – ElektroG in deutsches Recht umgesetzt. Dieses Gesetz verbietet vom 24. März 2006 an das Entsorgen von Elektro- und Elektronikgeräten über die Hausmülltonne! Diese Geräte müssen den lokalen Sammelsystemen bzw. örtlichen Sammelstellen zugeführt werden! Dort werden sie kostenlos entgegen genommen. Die Kosten für den weiteren Recyclingprozess übernimmt die Gesamtheit der Gerätehersteller.



LINDY No 42770

1st Edition, October 2009

www.lindy.com
